



# Quick Start Guide

## Power Up!

Clipper can be used with or without a cord.

### RECHARGEABLE CORD/CORDLESS OPERATION

1. Before use, the clipper must be fully charged for 12 to 15 hours.
2. Once fully charged, the unit may be used without cord.
3. After use, move the on/off switch to the "0" (OFF/CHARGE) position. Reconnect the clipper to the cord and recharge batteries by connecting the cord into any convenient electrical outlet.

### CORDED OPERATION

1. Be sure the on/off switch is in the "0" (OFF) position.
2. Connect the clipper to the cord, and plug it into an electrical outlet
3. Move the on/off switch to the "1" (ON) position.
4. After use, disconnect cord from outlet.

## Keep it Running Like New!

The blades of your new clipper should be oiled every few haircuts. For best results, place three drops on front of the blade as shown. Use only the Wahl Clipper Oil included in the pack. Do not use hair oil, grease or any oil mixed with kerosene or any solvent.



## Your New Clipper



## Keep it Clean!

### REMOVING & CLEANING DETACHABLE BLADES

To remove the blades - be sure the on/off switch is in the "0" (OFF) position. Hold the clipper firmly in one hand. Using the thumb of your other hand, simply push the blades away from the front of the clipper. The blades and mounting plate behind them will all come off in one piece.

To remove hair from between the blades, use the cleaning brush provided.

 
To reattach the blade, place the hook at the bottom of the blade set into the space provided on the clipper housing. Then pivot the blade set toward the housing. Once it is seated, snap the blade set to the case until you hear a click.



### WASHING BLADES

The blades are washable directly around the blade area housing only. Avoid washing all areas around the on/off switch and power adapter connection areas.


NOTE: DO NOT SUBMERGE UNDER WATER.

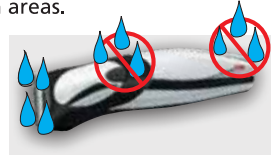

## Goof- Proof!


### Adding Attachment Guards

 Align guard onto blade then press down on middle tab until you hear a snap.

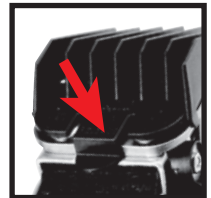

### Removing Attachment Guards

 From underneath, lift tab up to release from blade.

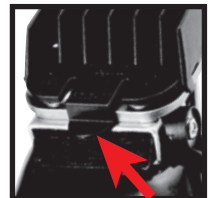

Easy step-by-step instructions included. For more haircutting tips and techniques visit [grooming.wahl.com](http://grooming.wahl.com).

SAFETY FIRST! Please read instruction book first before using clipper

If defective contact Wahl via 1-800-767-9245

**WAHL**<sup>®</sup>  
HOME PRODUCTS

## 21 Piece Kit



# Rechargeable Cord/Cordless

COMPLETE HAIRCUTTING KIT

## Thank You!

Thank you for purchasing this Wahl haircutting kit. We appreciate your support and we hope you enjoy your new clipper!

If you have any questions, please contact one of our USA based customer service representatives located next to our factory in Sterling, IL USA

[www.grooming.wahl.com](http://www.grooming.wahl.com)  
1-800-767-9245

The Brand Used  
By Professionals<sup>®</sup>

Quick Start Guide ▶