

## IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS AND SAFEGUARDS BEFORE USING THIS APPLIANCE. When using an electrical appliance, basic precautions should always be followed, including the following:

**DANGER:** To reduce the risk of electrical shock.  
1) Do not reach for appliance that has fallen into water. Unplug immediately.  
2) Do not use while bathing or in a shower, tub or sink.  
3) Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.  
4) Always unplug this appliance from electrical outlet immediately after using.  
5) Unplug this appliance before cleaning.

**WARNING:** To reduce the risk of burns, fire, electrical shock, or injury to person.

1) An appliance should never be left unattended when plugged in.  
2) This appliance is not intended for use by children and other persons whose physical, sensory, or mental capabilities or lack of experience and knowledge prevents them from using the appliance safely without supervision or instruction by a responsible person to ensure that they can use the appliance safely. Children should be supervised by the responsible person to ensure that they do not play with the appliance.

3) Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.

4) Never operate this appliance if it has a damaged cord or plug if it is not working properly, if it has been damaged or dropped in water. Return the appliance to Wahl Clipper Corporation for examination and repair.

5) Keep the cord away from heated surface.

6) Never operate this appliance with the air opening blocked or while on a soft surface, such as a bed or a couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.

7) Never drop or insert any object into any opening.

8) Do not operate where aerosol (spray) products are being used.

Wahl Regular Against the grain 1/32" to 1/8"

Blade Without with the grain 1/16" to 3/16"

Attachment #1037

"The variables affecting length of cut are greater at these heights even though clipping is normally done with the grain."

Blade Attachment #1 Against the grain 5/32" to 7/32"

With the grain 1/8" to 1/4"

Blade Attachment #2 With the grain 1/4" to 1/2"

Blade Attachment #3 With the grain \* 1/2" to 3/4"

Blade Attachment #4 With the grain \* 3/4" to 1"

### STAINLESS STEEL BLADE ATTACHMENTS

With the STAINLESS STEEL BLADE ATTACHMENTS, Wahl brings you another fine time-saving development in pet grooming. Three sizes to give you the widest range of cutting heights WITH NO BLADE CHANGING.

--Improved Feed since it goes through most thick and matted hair easily.

-Improved cutting since it lifts and guides hair OVER the Clipper teeth without snagging.

-Polished tools that won't scratch even delicate skin.

-Designed to quickly attach and lock securely in place.

-Fits all models of Wahl Adjustable Blade Clippers.

SCHNAUZER  
Use the Wahl Regular Blade with the Blade Adjustment Lever in the "Coarse" position; use Blade Attachment #1 if a longer trim is desired.

With the Schnauzer, it is most important that it is trimmed at least once before the ear cropping is done, usually completed at 12 weeks of age.

Otherwise, your schnauzer will probably associate clipping with cropping and the next few grooming sessions will be most difficult.

1) Stand dog on grooming table. Clip the top of the back from the base of the skull to the base of the tail. Clip the throat, front and sides of the body and the tail. Clip all the areas with the grain. Clip sides and back of rear legs toward the hock; curve the sides toward the hock and do not clip the front of the rear legs. Remove Blade Attachment #1.

2) Clip stomach area from the rear to the front; clip penis carefully with the grain. Clip skull from a point above the eyebrows to the base of the skull and to the ears. Clip from the outside corner of the ears to the base of the ears and to the corner of the mouth.

3) Set the Blade Adjustment Lever midway between "fine" and "coarse", #15 position, and clip both sides of the ears from the base to the tip.

4) Scissor and trim front legs to a rounded and straight appearance. Scissors trim body and rear legs; do the same with eyebrows, muzzle and mustache. The purpose is to achieve a straight and square look.

### AIREDALE, IRISH, LAKELAND, WELSH & FOX TERRIERS

If you plan to show your terrier and he has wire coat, stripping, not clipping is required. However, clipping is a far easier method of grooming for both pet and show.

These terriers are clipped in much the same manner as the Schnauzer except for the rear legs. Use the Wahl Regular blade with the Blade Adjustment Lever in the "coarse", #10 position and install Blade Attachment #1. Do not clip the rear legs; blend the clipping of the sides into the hips. Scissor and trim the

eyebrows, muzzle and mustache to the recognized standard of the particular breed.

COCKERS-SETTERS-SPANIELS  
Sporting dogs generally require little clipping. However, all longhaired Sporting Dogs can be more effective in the field when properly groomed.

Otherwise, your schnauzer will probably associate clipping with cropping and the next few grooming sessions will be most difficult.

1) Stand dog on grooming table. Clip the top of the back from the base of the skull to the base of the tail. Clip the throat, front and sides of the body and the tail. Clip all the areas with the grain. Clip sides and back of rear legs toward the hock; curve the sides toward the hock and do not clip the front of the rear legs. Remove Blade Attachment #1.

2) Clip stomach area from the rear to the front; clip penis carefully with the grain. Clip skull from a point above the eyebrows to the base of the skull and to the ears. Clip from the outside corner of the ears to the base of the ears and to the corner of the mouth.

3) Set the Blade Adjustment Lever midway between "fine" and "coarse", #15 position, and clip both sides of the ears from the base to the tip.

4) Scissor and trim front legs to a rounded and straight appearance. Scissors trim body and rear legs; do the same with eyebrows, muzzle and mustache. The purpose is to achieve a straight and square look.

AFTER A DAY IN THE FIELD, go over your dog with a medium comb. A "tangle-remover" spray will help in getting rid of burrs. Check for and treat cuts and injured paws.

SERVICES AND REPAIR  
This appliance contains no user-serviceable parts. Any servicing, other than changing of the blades, should be done by Wahl Service Department.

Do not return this product to the store where purchased. If you have problems with your clipper, send it prepaid with a note explaining the problem to:

Wahl Europe  
Herne Bay Trade Park  
Herne Bay, Kent CT6 8JZ England

For products purchased outside the United States or Europe, contact your distributor.

New replacement blades are available from your retail tack or pet shop or from Wahl Clipper Corporation.

If it is needed, clip the body. Blade Attachment #5 is suggested--it will leave the hair about 1/2" to 3/4" long. This type of clipping, even though it may detract from the dog's "looks" is a sensible approach for a dog used in hunting.

After a day in the field, go over your dog with a medium comb. A "tangle-remover" spray will help in getting rid of burrs. Check for and treat cuts and injured paws.

HAIR TRIMMING  
This appliance contains no user-serviceable parts.

Any servicing, other than changing of the blades, should be done by Wahl Service Department.

Do not return this product to the store where purchased. If you have problems with your clipper, send it prepaid with a note explaining the problem to:

Wahl Europe  
Herne Bay Trade Park  
Herne Bay, Kent CT6 8JZ England

For products purchased outside the United States or Europe, contact your distributor.

New replacement blades are available from your retail tack or pet shop or from Wahl Clipper Corporation.

If it is needed, clip the body. Blade Attachment #5 is suggested--it will leave the hair about 1/2" to 3/4" long. This type of clipping, even though it may detract from the dog's "looks" is a sensible approach for a dog used in hunting.

After a day in the field, go over your dog with a medium comb. A "tangle-remover" spray will help in getting rid of burrs. Check for and treat cuts and injured paws.

HAIR TRIMMING  
This appliance contains no user-serviceable parts.

Any servicing, other than changing of the blades, should be done by Wahl Service Department.

Do not return this product to the store where purchased. If you have problems with your clipper, send it prepaid with a note explaining the problem to:

Wahl Europe  
Herne Bay Trade Park  
Herne Bay, Kent CT6 8JZ England

For products purchased outside the United States or Europe, contact your distributor.

New replacement blades are available from your retail tack or pet shop or from Wahl Clipper Corporation.

If it is needed, clip the body. Blade Attachment #5 is suggested--it will leave the hair about 1/2" to 3/4" long. This type of clipping, even though it may detract from the dog's "looks" is a sensible approach for a dog used in hunting.

After a day in the field, go over your dog with a medium comb. A "tangle-remover" spray will help in getting rid of burrs. Check for and treat cuts and injured paws.

HAIR TRIMMING  
This appliance contains no user-serviceable parts.

Any servicing, other than changing of the blades, should be done by Wahl Service Department.

Do not return this product to the store where purchased. If you have problems with your clipper, send it prepaid with a note explaining the problem to:

Wahl Europe  
Herne Bay Trade Park  
Herne Bay, Kent CT6 8JZ England

For products purchased outside the United States or Europe, contact your distributor.

New replacement blades are available from your retail tack or pet shop or from Wahl Clipper Corporation.

If it is needed, clip the body. Blade Attachment #5 is suggested--it will leave the hair about 1/2" to 3/4" long. This type of clipping, even though it may detract from the dog's "looks" is a sensible approach for a dog used in hunting.

After a day in the field, go over your dog with a medium comb. A "tangle-remover" spray will help in getting rid of burrs. Check for and treat cuts and injured paws.

HAIR TRIMMING  
This appliance contains no user-serviceable parts.

Any servicing, other than changing of the blades, should be done by Wahl Service Department.

Do not return this product to the store where purchased. If you have problems with your clipper, send it prepaid with a note explaining the problem to:

Wahl Europe  
Herne Bay Trade Park  
Herne Bay, Kent CT6 8JZ England

For products purchased outside the United States or Europe, contact your distributor.

New replacement blades are available from your retail tack or pet shop or from Wahl Clipper Corporation.

If it is needed, clip the body. Blade Attachment #5 is suggested--it will leave the hair about 1/2" to 3/4" long. This type of clipping, even though it may detract from the dog's "looks" is a sensible approach for a dog used in hunting.

After a day in the field, go over your dog with a medium comb. A "tangle-remover" spray will help in getting rid of burrs. Check for and treat cuts and injured paws.

HAIR TRIMMING  
This appliance contains no user-serviceable parts.

Any servicing, other than changing of the blades, should be done by Wahl Service Department.

Do not return this product to the store where purchased. If you have problems with your clipper, send it prepaid with a note explaining the problem to:

Wahl Europe  
Herne Bay Trade Park  
Herne Bay, Kent CT6 8JZ England

For products purchased outside the United States or Europe, contact your distributor.

New replacement blades are available from your retail tack or pet shop or from Wahl Clipper Corporation.

If it is needed, clip the body. Blade Attachment #5 is suggested--it will leave the hair about 1/2" to 3/4" long. This type of clipping, even though it may detract from the dog's "looks" is a sensible approach for a dog used in hunting.

After a day in the field, go over your dog with a medium comb. A "tangle-remover" spray will help in getting rid of burrs. Check for and treat cuts and injured paws.

HAIR TRIMMING  
This appliance contains no user-serviceable parts.

Any servicing, other than changing of the blades, should be done by Wahl Service Department.

Do not return this product to the store where purchased. If you have problems with your clipper, send it prepaid with a note explaining the problem to:

Wahl Europe  
Herne Bay Trade Park  
Herne Bay, Kent CT6 8JZ England

For products purchased outside the United States or Europe, contact your distributor.

New replacement blades are available from your retail tack or pet shop or from Wahl Clipper Corporation.

If it is needed, clip the body. Blade Attachment #5 is suggested--it will leave the hair about 1/2" to 3/4" long. This type of clipping, even though it may detract from the dog's "looks" is a sensible approach for a dog used in hunting.

After a day in the field, go over your dog with a medium comb. A "tangle-remover" spray will help in getting rid of burrs. Check for and treat cuts and injured paws.

HAIR TRIMMING  
This appliance contains no user-serviceable parts.

Any servicing, other than changing of the blades, should be done by Wahl Service Department.

Do not return this product to the store where purchased. If you have problems with your clipper, send it prepaid with a note explaining the problem to:

Wahl Europe  
Herne Bay Trade Park  
Herne Bay, Kent CT6 8JZ England

For products purchased outside the United States or Europe, contact your distributor.

New replacement blades are available from your retail tack or pet shop or from Wahl Clipper Corporation.

If it is needed, clip the body. Blade Attachment #5 is suggested--it will leave the hair about 1/2" to 3/4" long. This type of clipping, even though it may detract from the dog's "looks" is a sensible approach for a dog used in hunting.

After a day in the field, go over your dog with a medium comb. A "tangle-remover" spray will help in getting rid of burrs. Check for and treat cuts and injured paws.

HAIR TRIMMING  
This appliance contains no user-serviceable parts.

Any servicing, other than changing of the blades, should be done by Wahl Service Department.

Do not return this product to the store where purchased. If you have problems with your clipper, send it prepaid with a note explaining the problem to:

Wahl Europe  
Herne Bay Trade Park  
Herne Bay, Kent CT6 8JZ England

For products purchased outside the United States or Europe, contact your distributor.

New replacement blades are available from your retail tack or pet shop or from Wahl Clipper Corporation.

If it is needed, clip the body. Blade Attachment #5 is suggested--it will leave the hair about 1/2" to 3/4" long. This type of clipping, even though it may detract from the dog's "looks" is a sensible approach for a dog used in hunting.

After a day in the field, go over your dog with a medium comb. A "tangle-remover" spray will help in getting rid of burrs. Check for and treat cuts and injured paws.

HAIR TRIMMING  
This appliance contains no user-serviceable parts.

Any servicing, other than changing of the blades, should be done by Wahl Service Department.

Do not return this product to the store where purchased. If you have problems with your clipper, send it prepaid with a note explaining the problem to:

Wahl Europe  
Herne Bay Trade Park  
Herne Bay, Kent CT6 8JZ England

For products purchased outside the United States or Europe, contact your distributor.

New replacement blades are available from your retail tack or pet shop or from Wahl Clipper Corporation.

If it is needed, clip the body. Blade