


Wahl® Deep-Knead Heated Massage Wrap Guide

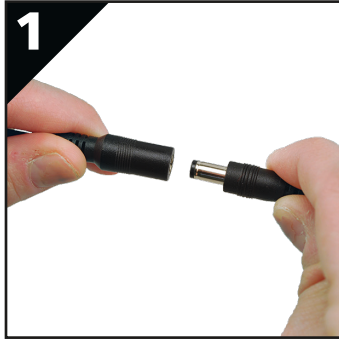

Insert adapter jack into the plug on the left side of the unit.



Plug into a AC 120-volt outlet.



To turn the massage rollers on, press the power button on the controller once.



This unit has a dual rotation feature. Press the power button again to make the massage rollers rotate in the opposite direction.




To turn the heat on, press the heat button once. To turn the heat off, press the heat button again.



To turn the massage rollers off, press the power button a third time. If the heat is on, it will remain on if you turn the rollers off. This unit automatically turns off after 20 minutes.

Wahl® Deep-Knead Heated Massage Wrap Key Features

*****Colors and decoration
styles may vary.*****

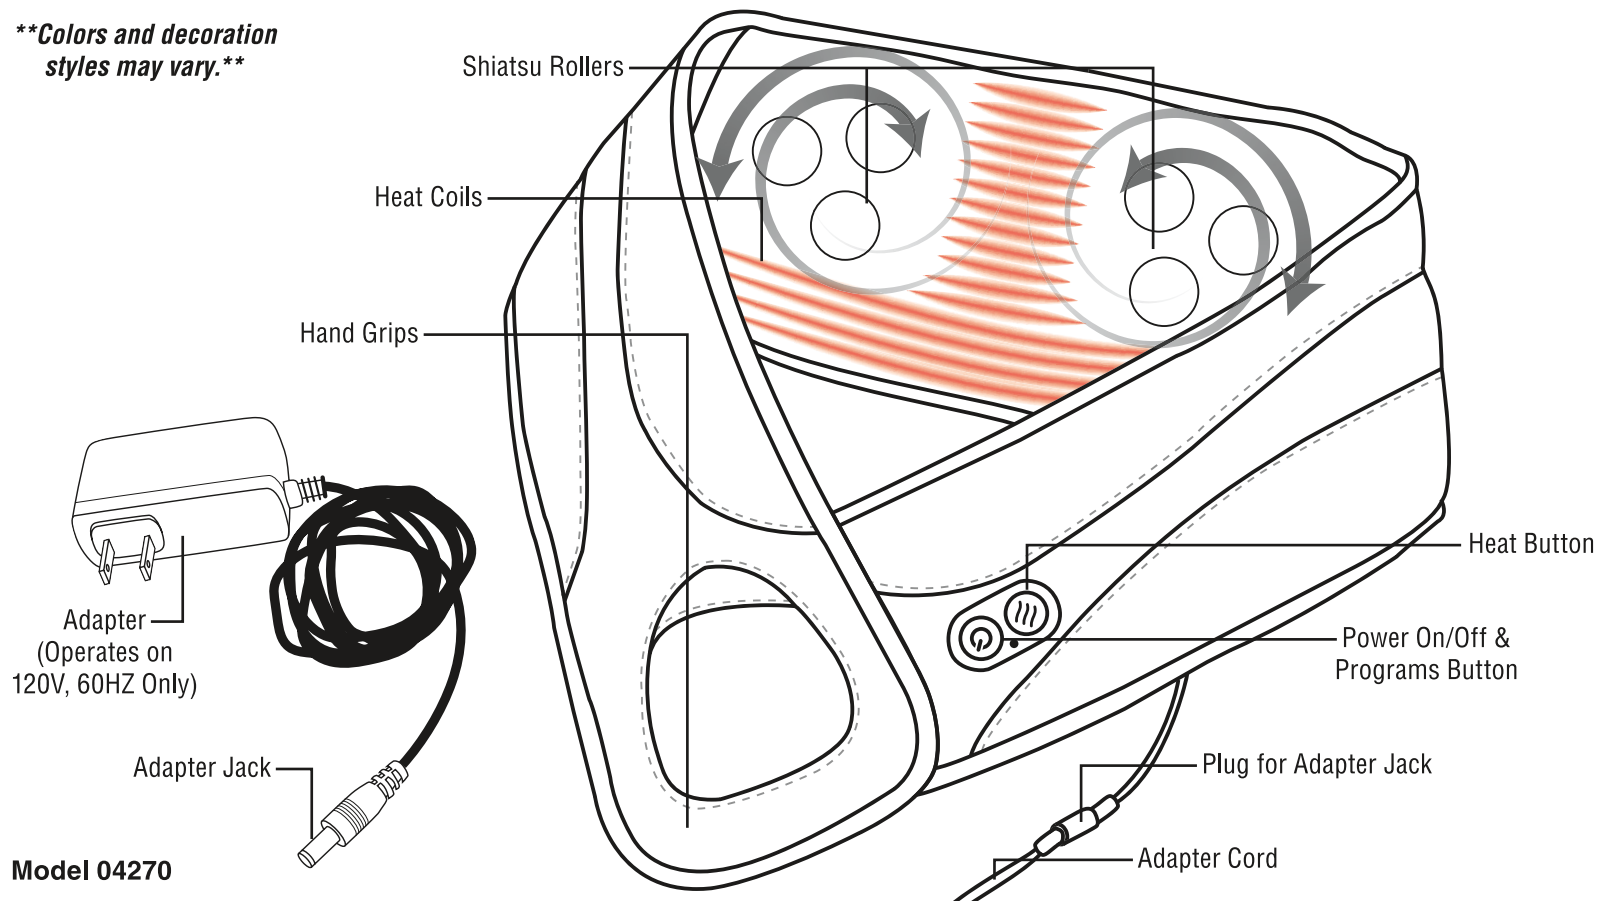

Model 04270

If you are not completely satisfied with your Wahl massager, please contact us before returning this product at **WahlUSA.com** or **1-800-767-9245**.