



Quick Start Guide

Charge it!

To charge, turn off clipper and connect charger to clipper and plug into an electrical outlet (see instruction sheets and charger for warnings and electrical specifications). Power indicator light on clipper will illuminate once power is connected. The clipper will take approximately 3 to 5 hours to charge.

The power indicator light will not turn off or change color after clipper is charged. After 3 to 5 hours, unplug charger from plug and clipper. The charger is designed to charge the clipper battery without overcharging.

Keep it Running Like New!

The blades of your new clipper and trimmer should be oiled every few haircuts. For best results, place three drops on front of the blades and one drop on each side of blade as shown. Use only Wahl Clipper Oil. Do not use hair oil, grease or any oil mixed with kerosene or any solvent.





Your New Clipper



Goof-Proof!


Adding Attachment Guards

Align guard onto blade then press down where guard number is located until you hear a snap.

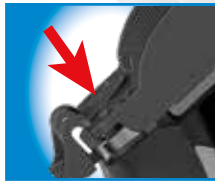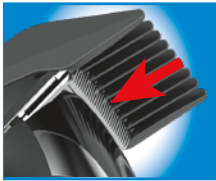

Removing Attachment Guards

From underneath, lift tab up to release from blade.

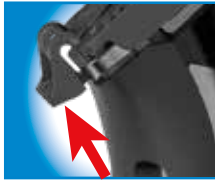


Blend it!

Use for blending between different hair lengths. The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut. (Up position = closest cut; Down position = longest cut)



Keep Trim!

Insert two (AA) Alkaline batteries as shown. Batteries not included.

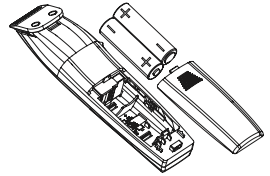

Use battery trimmer to detail around ears, neckline, and side burns.



You can do it!



Haircutting Tips & Techniques

When you cut your hair, you should visualize the head as if it were divided into four sections. Image above shows the different sections. Using proper techniques when moving from one section to the next will help you blend the sections together for professional looking results. See instruction book for more tips.

It's Easy!

Easy step-by-step instructions included. For more haircutting tips and techniques visit WahlUSA.com.

Helpful Hints

Use brush included to clean out excess hair on clipper and between blades (don't clean with running water)

SAFETY FIRST! Please read instruction book first before using clipper

If defective contact Wahl via 1-800-767-9245



Lithium Pro™

COMPLETE CORDLESS HAIRCUT
& TOUCH UP KIT



Thank You!

Thank you for purchasing this Wahl haircutting kit. We appreciate your support and we hope you enjoy your new clipper and trimmer!

If you have any questions, please contact one of our USA based customer service representatives located next to our factory in Sterling, IL USA.

 help@wahlclipper.com

 1.800.767.9245
(M-F 7:30am - 4:30pm CST)

 wahlUSA.com



Find us on social media:
@WAHLGROOMING



Quick Start Guide 