



Quick Start Guide

Charge it!

Before the clipper is used for the first time, it should be charged for 3 to 5 hours. After the first charge, it will also take 3 to 5 hours to fully recharge the battery. Turn the clipper to the off position when charging. Unplug the charger from the clipper when not in use. This transformer is designed to charge the battery without overcharging.

Keep it Running Like New!

The blades of your new clipper and trimmer should be oiled every few haircuts. For best results, place three drops on front of the blades and one drop on each side of blade as shown. Use only the Wahl Clipper Oil included in the pack. Do not use hair oil, grease or any oil mixed with kerosene or any solvent.



Goof-Proof!

Adding Attachment Guards

Align guard onto blade then press down on guard where guard number is located until you hear a snap.



Removing Attachment Guards
From underneath, lift tab up to release from blade.

Your New Clipper



You can do it!




Haircutting Tips & Techniques

When you cut your hair, you should visualize the head as if it were divided into four sections. Image above shows the different sections. Using proper techniques when moving from one section to the next will help you blend the sections together for professional looking results. See instruction book for more tips.

Blend it!

Use for blending between different hair lengths. The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut. (Up position = closest cut; Down position = longest cut)

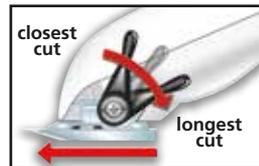

Organize!

Storage bag for attachment guards and blade cleaning cloth included.



Helpful Hints

Use brush included to clean out excess hair on clipper and between blades (don't clean with running water)

SAFETY FIRST! Please read instruction book first before using clipper

If defective contact Wahl via 1-800-767-9245

