 



TIPS & TECHNIQUES

When you cut your hair, you should visualize the head as if it were divided into four sections. Image below shows the different sections. Using proper techniques when moving from one section to the next will help you blend the sections together for professional looking results.

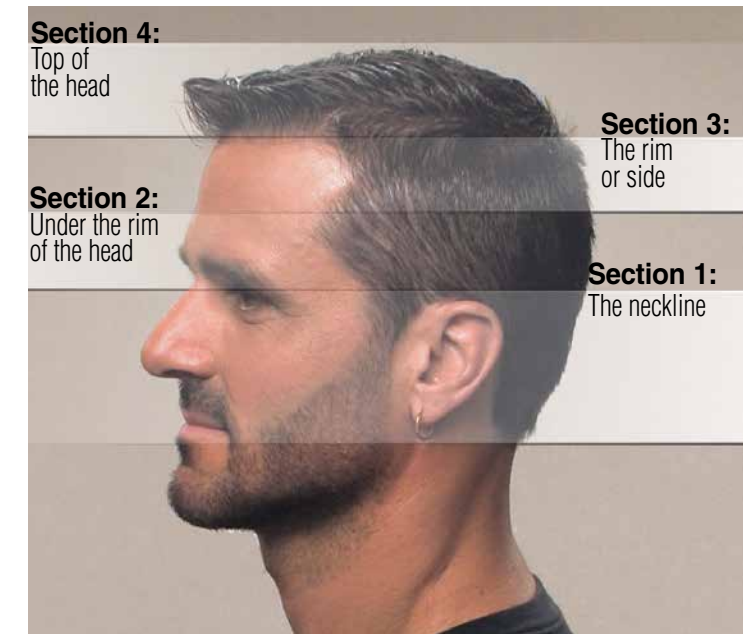


- The first time you cut hair, cut only a small amount of hair until you become accustomed to the length of hair each attachment guard provides.
- For best results, hair should be dry before using clipper.
- For best results, when cutting hair, go through hair at a slow, even speed. Don't force the clipper through the hair.
- For best results, go through the hair against the direction of your hair's growth, so you can catch more hair with the guard.
- The blades on your new clipper should be oiled every few haircuts.

 STEP-BY-STEP GUIDE FOR CUTTING HAIR

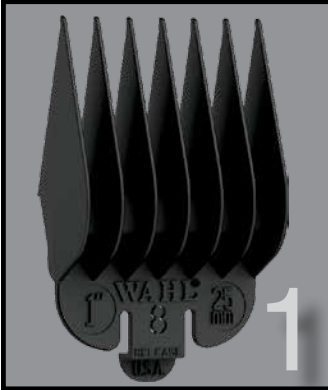

 1. Comb hair and remove tangles. Add the largest attachment guard to the clipper.

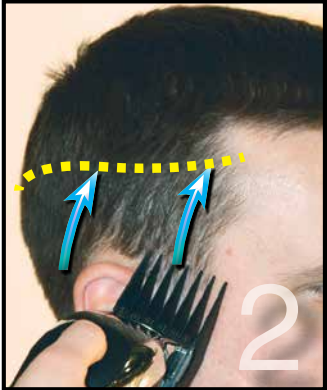


2. Start at hairline on side of head and cut up to middle of head. **Note: If cut hair is too long, repeat with next smaller guard.**



3. Continue around head repeating step 2.



 
4. You are now ready to cut the middle portion of the hair.

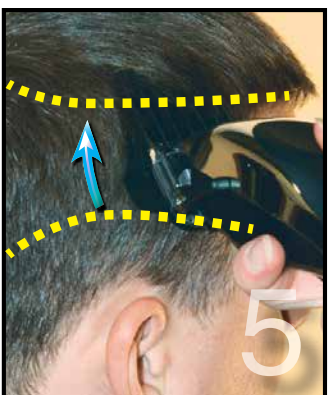

5. Use the attachment guard with the next highest number than in step 3. Example: If you used a #6 guard in **step 3**, select guard #7.



 6. Continue cutting around middle portion of head as in steps 2 and 3.

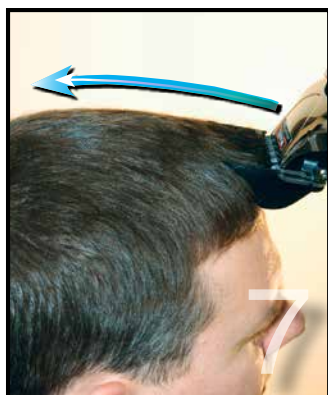

7. For cutting top of head, use the attachment guard with the next highest number than in **step 6**. Start at front bang area.



8. Cut across top of head. Comb hair on entire head to assess if further cutting is necessary.

BLENDING

When you want to blend from one section to the next, you will need to practice moving the clipper in an upward rocking motion. This motion will leave the hair slightly longer where the clipper pulls away from the scalp, enabling you to blend between the sections and achieve a smooth transition from one length of hair to the next. This technique will enhance the appearance of your haircuts.



1. Blend out any cut lines. Lines may form where you change guard sizes. Use the same guard used in **step 3**

2. Using a rocking motion, blend out the middle cut line.

3. Using the guard used in **step 8** repeat blending the top outline as needed.

OUTLINING



1. No attachments needed. Start with the sideburns.

2. Continue around ear as shown.

3. Trim neckline as shown.

WARRANTY

5-YEAR LIMITED WARRANTY - CORDED CLIPPER
Valid in U.S.A. Only

If your Wahl corded clipper product fails to operate satisfactorily within five (5) years from the date of original purchase or receipt as a gift, Wahl will, at our option, repair or replace it and return it to you FREE OF CHARGE.

2-YEAR LIMITED WARRANTY - BATTERY TRIMMER
Valid in U.S.A. Only
Not all kits include a trimmer

If your Wahl battery trimmer product fails to operate satisfactorily within two (2) years from the date of original purchase or receipt as a gift, Wahl will, at our option, repair or replace it and return it to you FREE OF CHARGE.

Do not return this product to store where purchased. Products needing repair under this warranty should be returned with postage prepaid to:

Wahl Clipper Corp.
Attn: Repair Department
3001 Locust Street
Sterling, Illinois 61081

Include a note describing the defect and the date of original purchase or receipt as a gift (if in warranty). Products out of warranty will be repaired at our standard repair charges.

This warranty is void and no repair or replacement will be made under this warranty or otherwise if: (1) The product is modified in any manner or repaired by anyone other than Wahl Clipper Corporation or Wahl authorized service center. (2) The product has been used commercially or subjected to unreasonable use.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. No other written express warranty is given. Any implied warranty, including any warranty of merchantability which may arise from purchase or use, is limited to the year period provided in this express warranty. Some states may not allow such limitation, so it may not apply to you. No responsibility is assumed for incidental or consequential damages of any type, or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation or exclusion may not apply to you. Outside U.S.A., check with store for Wahl authorized distributor's warranty.

WAHL® HOME PRODUCTS



Question? contact us at:
grooming.wahl.com or **1-800-767-9245**
Part #91584 v.2017.10
© 2017 WAHL CLIPPER CORPORATION
P.O. Box 578, Sterling, Illinois 61081 USA

The Brand Used By Professionals™

CLIPPER MAINTENANCE

CLEANING:
To remove hair from between the blades, use the cleaning brush provided. **DO NOT USE WATER TO CLEAN THE BLADES.** For best results, after brush cleaning the blades, add Wahl clipper oil to the blades.

OIL:
The blades on your new clipper should be oiled every few haircuts. For best results, place three drops on front of each blade and one drop on each side of the blade as shown. Use only Wahl Clipper oil (a small bottle is included in this kit, additional oil can be purchased separately, see www.grooming.Wahl.com for details).

DO NOT USE HAIR OIL, GREASE, OR ANY OIL MIXED WITH KEROSENE OR ANY SOLVENT.



TAPER LEVER:
The taper lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut. (Up position = closest cut; Down position = longest cut). Should the blades become jammed with hair, move the taper lever up and down several times. This will help free up the blades.



RECHARGING
1. Remove the clipper, recharging transformer and accessories from the packing material.
2. Before the appliance is used for the first time, it should be charged for 3 to 5 hours. After the first charge, it will also take 3 to 5 hours to fully recharge the battery. During charging, the charging indicator is illuminated. The charging indicator will begin to flicker when almost fully charged and may shut off when fully charged.
3. After initial charge, clipper can be "Quick Charged" for 15 minutes. This should allow enough power for one haircut.
4. Plug the recharging transformer into any convenient electrical outlet at the correct voltage. If clipper is on, turn to off position when charging.

5. When clipper is not in use, it may be connected to the transformer and plugged into an outlet to assure maximum power is available when it is next used. This transformer is designed to charge the battery without overcharging.
6. The charge cord should be removed from the clipper when not charging. Leaving the power cord connected to the clipper without being plugged in may cause the battery to drain.
7. The charging indicator light will illuminate when your clipper is in the "OFF" position and connected to its charger. The clipper cannot be overcharged, so you may charge it as often as desired.
8. The cord should not be used to pull the clipper. Since freedom of movement needs to be maintained, care should be used to keep the cord untwisted and unobstructed. When stored, the cord should be coiled and unit placed in original box or storage case (if provided), away from children.

TROUBLESHOOTING
If your clipper does not seem to take a charge, check the following before returning it for repair:
1. Check outlet operation by plugging in another appliance.
2. Make sure the outlet is not connected to a switch which turns the power at the outlet off.
3. Be sure the clipper is properly connected to the recharging transformer, all connections are secure and the switch on the clipper is turned "OFF - 0".
4. If your electricity is connected to a master power switch, we suggest the clipper be disconnected from the charger anytime the master switch is off. Leaving the unit plugged into a dead outlet or an unplugged charger will drain the battery.
5. If clipper does not run and it is completely charged, turn the unit "ON - I" and pinch or push the blades manually. (Oil may have dried out between the blades, so they may be temporarily stuck together.)

LITHIUM-ION BATTERY REPLACEMENT, CLIPPER DISPOSAL AND RECYCLING:
• For battery replacement send the entire, intact clipper unit to: Wahl Annex 3001 North Locust, P.O. Box 578, Sterling, IL 61081
• Do not attempt to remove the battery. Lithium-Ion batteries can explode, catch fire, and/or cause burns if disassembled, damaged, or exposed to water or high temperatures.
• If you choose not to replace the battery, the entire, intact clipper unit must be disposed. Do not attempt to remove the battery for disposal. Lithium-Ion batteries may be subject to local disposal regulations. Many locations prohibit disposal in standard waste receptacles. Check your local laws and regulations.
• For recycling contact a government recycling agency, waste disposal service, retailer, or visit online recycling sources, such as www.batteryrecycling.com or www.rbric.org.

EASY-TO-USE ATTACHMENT GUARDS

Some kits do not include all size Wahl guards. Some kits include colored guards.

#1/2 · (1.5mm) 1/16"	
#1 · (3mm) 1/8"	
#1 1/2 · (4.5mm) 3/16"	
#2 · (6mm) 1/4"	
#3 · (10mm) 3/8"	
#4 · (13mm) 1/2"	
#5 · (16mm) 5/8"	
#6 · (19mm) 3/4"	
#7 · (22mm) 7/8"	
#8 · (25mm) 1"	
#10 · (31mm) 1 1/4"	
#12 · (38mm) 1 1/2"	

Attachment guards help you cut hair to a desired length by keeping the blades at set distance from the skin, helping ensure an even hair length when cutting hair with a clipper. For reference, each guard is numbered and also lists what the length of the hair will be after being cut.

Attachment guard sizes vary. Always start with a longer length guard (you can always use a shorter length guard if the length is not short enough).

The first time you cut hair, cut only a small amount of hair until you become accustomed to the length of hair each attachment guard provides.

ADDING GUARDS: Pictured in fig A & fig B
Before adding guards, make sure the on/off switch is turned to the "0" or "OFF" position.

1. While holding at a slight angle, place the attachment guard onto the clipper so the tips of the blade rests into the slots of the guard fingers. (fig A)
2. Using your thumb, push down on the guard, where the guard size number is located, until you hear a "SNAP". (fig B)

REMOVING GUARDS: Pictured in fig C
Before removing guards, make sure the on/off switch is turned to the "0" or "OFF" position.

1. While holding the top of attachment guard, place your thumb on the underside of the attachment guard tab. Push up on tab to remove guard from clipper. (fig C)

BROW TRIM GUARDS

NOTE: NOT ALL WAHL KITS INCLUDE BROW / EAR TRIM GUARDS

EAR TRIM GUARDS

1. Attach the brow trim guard to clipper.
2. Starting from just above your nose, slowly guide the clipper to the outside of your face.
For shorter brow trim repeat steps 1 and 2 working from outside face to your nose.

1. Attach ear trim guard to clipper.
2. Hold the clipper at a 45-degree angle.
3. Use your finger to tilt ear forward away from hairline.
4. Slowly trim along the hair line from back to front.
Avoid poking eyes.

EARS

To achieve a "tapered" cut around the ears, use the left and right tapered attachment guards

- 1) Attach the "R" RIGHT attachment guard to the clipper.
fig. A) First, starting behind the RIGHT ear (so shorter portion of guard fingers are closest to the ear), move the clipper upward and around towards the front side of the ear. Repeat as needed.
fig B) Second, starting on the front of the LEFT ear, (so shorter portion of guard fingers are closest to the ear), move the clipper upward and around towards the back side of the ear. Repeat as needed.



- 2) Repeat, except now using the "L" LEFT guard. Attach the "L" LEFT attachment guard to the clipper.
fig. A) First, starting behind the LEFT ear (so shorter portion of guard fingers are closest to the ear), move the clipper upward and around towards the front side of the ear. Repeat as needed.
fig. B) Second, starting on the front of the RIGHT ear, (so shorter portion of guard fingers are closest to the ear), move the clipper upward and around towards the back side of the ear. Repeat as needed.



YOUR NEW CLIPPER



Thank you for purchasing a Wahl hair clipper. Please enjoy the benefits of cutting your hair at home!

BATTERY TRIMMER INSTRUCTIONS
Select clipper kits include a battery trimmer, your kit may or may not include a trimmer

1. Remove battery cover from clipper by pushing in and back on the plastic door in the direction of the arrow.
2. **IMPORTANT:** Be sure to insert the negative (-) end of each battery first, so that it depresses the spring at the top of the battery compartment. Then slide the positive (+) end into position. Do not allow the negative terminal clips to bend and cut the casing of the batteries. Use alkaline batteries with your Wahl trimmer. Alkaline batteries will provide the longest operating time before battery replacement is needed. Trimmer should run approximately three hours on alkaline batteries.
3. Replace battery cover to its original position.
4. Move switch to "ON" position to use.
5. To maximize battery life, trimmer should be shut "OFF" immediately after using.

Please register your Wahl Clipper online at: grooming.wahl.com

Purchase Confirmation-
With the information you provide, we confirm the date of purchase of your product. This confirmation is of benefit to you, especially if your original proof of purchase is lost.

Proof of Ownership-
Your UPC number, item number and other information will be kept in our files for up to ten years.

