


BUMP-FREE

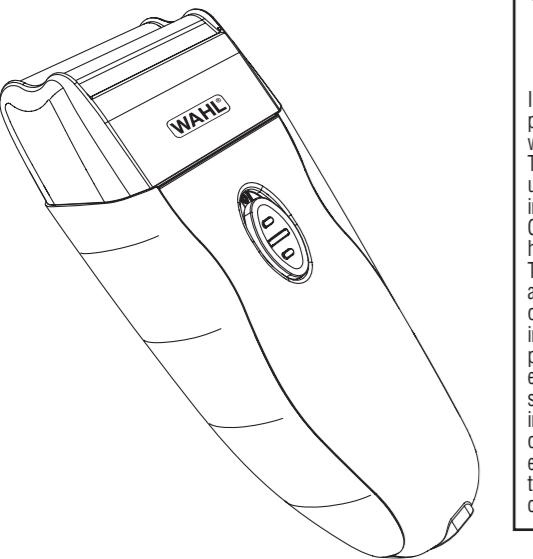

Operating Instructions for Rechargeable Shaving System

Instrucciones de Funcionamiento para el Sistema de Afeitado Recargable

QUICK TIPS & HANDY REMINDERS

- If you are a first-time electric shaver user, or changing from another brand, there will be a 2 to 3 week (or less) adjustment period while your face and beard adapts to the new foil.
- When you open your package, charge your shaver for 18 hours before the first shave.
- Replace the foil head and cutter bar every 6 to 12 months, depending on how often you shave and how tough your beard is.
- Be sure to clean the shaver, cutter bar and foil after every three or four shaves.
- Use the pop-up long-hair trimmer to snip stray hairs and to mow down 2 to 3 day growth before shaving with your chosen foil head.
- Keep using and both your face and beard will adapt to the shaver.
- During the break-in period of the cutter bar, you may experience a black residue left on the face. It is a harmless combination of whiskers, skin debris and minute particles from the cutter bar which will wash off easily. This condition will quickly disappear with use.

CHARGING OPERATION

- For best performance, charge for 18 hours before the first shave. This product has been designed with the charger in the plug. This construction allows the shaver to be very powerful, yet much lighter for easier maneuverability, and it also keeps the line voltage safely at the plug and not in the shaver.
- Plug the transformer cord into the shaver. BE SURE SHAVER IS IN THE "OFF" POSITION (MARKED "O" ON SHAVER) WHEN CHARGING.
- The shaver cannot be overcharged, so you may charge it as often as desired. However, periodic recharging of the shaver, rather than continuous recharging, will prolong battery life.

3-YEAR LIMITED WARRANTY

Valid in U.S.A. Only

If your Wahl product fails to operate satisfactorily within three (3) years from the date of original purchase or receipt as a gift, Wahl will, at our option, repair or replace it and return it to you FREE OF CHARGE. Do not return this product to store where purchased. Products needing repair under this warranty should be returned with postage prepaid to:

Wahl Clipper Corp.
Attn: Repair Department
3001 Locust Street
Sterling, Illinois 61081

Include a note describing the defect and the date of original purchase or receipt as a gift (if in warranty). Products out of warranty will be repaired at our standard repair charges.

This warranty is void and no repair or replacement will be made under this warranty or otherwise if: (1) The product is modified in any manner or repaired by anyone other than Wahl Clipper Corporation or Wahl authorized service center. (2) The product has been used commercially or subjected to unreasonable use. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. No other written express warranty is given. Any implied warranty, including any warranty of merchantability which may arise from purchase or use, is limited to the year period provided in this express warranty. Some states may not allow such limitation, so it may not apply to you. No responsibility is assumed for incidental or consequential damages of any type, or for the use of unauthorized attachments. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the limitation or exclusion may not apply to you. Outside U.S.A., check with store for Wahl authorized distributor's warranty.

For more information or Product Registration, visit shavers.wahl.com

© 2014 Wahl Clipper Corporation
Part No. 95809
Printed in U.S.A.

2

IMPORTANT SAFEGUARDS

When using your electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS AND SAFEGUARDS BEFORE USING THIS SHAVER.

DANGER

To reduce the risk of death or injury by electric shock:

- Do not reach for the electric shaver after it has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store the shaver where it can fall or be pulled into a tub or sink. Do not place or drop it into water or liquid.
- Except when charging, always unplug this appliance from the electrical outlet.
- Unplug the shaver before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This power unit is intended to be correctly orientated in a vertical or floor mount position.
- Always attach plug to appliance first, then to the outlet. To disconnect, turn-all controls to "OFF" and then remove plug from outlet.

- Use only the charger supplied by the manufacturer to recharge this shaver.

3

Close supervision is necessary when this appliance is used by, on, or near children or disabled persons.

- Use this shaver only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

- Never operate this shaver if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return your shaver to Wahl Clipper Corporation for examination and repair.

- Keep the cord away from heated surfaces.

- Never drop or insert any object into any opening.

- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

- Do not use this shaver with a damaged or broken foil, as facial injury may occur.**
- The RBRC program provides a convenient alternative to placing Ni-Cad batteries into the trash or the municipal waste stream, which is illegal in some areas. For proper disposal, call 1-800-8-BATTERY for a recycling center in your area.

4

SAVE THESE INSTRUCTIONS For Household Use Only

DISPOSAL OF NI-CAD BATTERY

CONTAINS SEALED, RECHARGEABLE NICKEL-CADMUM BATTERY. MUST BE RECYCLED OR DISPOSED OF PROPERLY.

Depending on use, your battery should last four to six years before replacement is necessary. When replacement is necessary, follow these simple steps:

- First remove the Flex Foil Head while shaver is in off position. Push the Shaver Head Release Button on the side of the shaver and lift foil head upward. Remove cutter bar by holding shaver in one hand, gently press down on cutter bar to rotate it 90° and gently lift it upward. Be sure your thumb and first finger are positioned at each end of cutter bar assembly.

- Remove the two Spring Clips on the top of the shaver using a small, flat-blade screwdriver. Place hand over Spring Clips when removing in order to prevent the clips from springing away and getting lost. Pull back trimmer housing away from the shaver.


- Cut wires on both sides of tab at each end of battery. Remove battery.

- The RBRC program provides a convenient alternative to placing Ni-Cad batteries into the trash or the municipal waste stream, which is illegal in some areas. For proper disposal, call 1-800-8-BATTERY for a recycling center in your area.

5

manufacturer to recharge this shaver.


CONGRATULATIONS! You own the Wahl® DynaFlex® Shaver. It has a patented high-speed cutting system and specially angled Flex-Foil™ dual heads . . . for remarkably close, amazingly fast shaves! Plus, a concealed full-width trimmer located on the back of the shaver pops up and away from the foil head for clear view shaping of sideburns, beards and mustaches. We at Wahl are confident you will find extraordinary shaving speed, comfort and closeness. Just follow the tips in this folder.

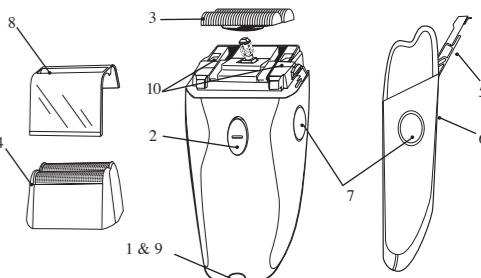

FEATURES

- Socket
- On/Off Switch
- Cutter Bar Assembly
- Flex Foil Head
- Long-Hair Pop-Up Trimmer
- Long-Hair Trimmer Switch
- Shaver Head Release Button
- Foil Guard
- Charger Contacts
- Spring Clips

Do Not Rinse Shaver

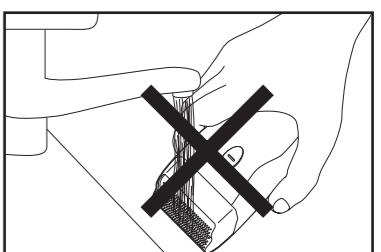

6

LOUD & PROUD

The Wahl® Bump-Free Shaver uses a very powerful rotary motor that delivers 10,000 cycles per minute to the cutter head. This results in a very strong audible hum, but is completely normal to its operation.

Don't settle for a weak shaver!

7

SERVICE AND REPAIR

If you have problems with your trimmer, send it prepaid with a note explaining the problem to:

Wahl Clipper Corporation
Attn: Repair Department
3001 Locust Street
Sterling, IL 61081
Telephone (800) 767-9245

For products purchased outside the United States, contact your distributor.

60 Day Money Back Guarantee!

If for any reason within 60 days of purchase of your Wahl® trimmer you are not satisfied with your trimmer and would like a refund, just return your trimmer, together with the sales receipt, to the retailer from whom you purchased it. Wahl will reimburse all retailers who accept trimmers within 60 days of purchase. If you have any questions regarding this money-back guarantee, please call 1-800-767-9245 in the United States.

8

HYPALLERGENIC TITANIUM FOIL

Many African-American men suffer from pseudofolliculitis barbae also known as razor bumps. There are few solutions to this problem, but the Wahl® Bump-Free shaver can help by:

- Keeping hair even and short
- Staying as antibacterial as possible
- Reducing allergic reactions through hypoallergenic titanium foils



IMPORTANT:
Because this foil is capable of shaving very close, use only a light touch when shaving the neck and other areas where the skin may be thin and sensitive.

Replacement Foil & Cutter Bar: #07019-500

SHAVING PROCEDURES FOR FAST, CLOSE SHAVES

We suggest that you thoroughly cleanse and completely dry your skin prior to shaving. For maximum speed and efficiency, hold the shaver so that both screens are in contact with the skin. When shaving the upper lip or neck, hold shaver so that the uppermost screen is in contact with skin.

Shave both with and against the grain of the beard, and stretch the skin taut in the path of the shaver. Guide the dual foil heads gently back and forth, primarily against the grain of the beard. **Do not press screen heads hard against face.** Heavy scrubbing action with the shaver could damage the foil and will not result in a closer shave. As a general rule, we recommend replacing the Flex Foil Head every six months for maximum results. The foil is micro-thin with precise, raised inner cutting edges around the whisker holes. These raised cutting edges will wear with use, which will be indicated if your shaver slows down and the blades seem to get warm. Always replace the Foil Guard to protect the delicate dual foil heads when shaver is off. To ensure continued shaving satisfaction, you should replace the foils and cutter bar periodically.

SHAVING HEAVY BEARD GROWTH


Begin shaving in a less dense area of the beard. Move the shaver in a circular motion on a small area of the face (this picks up the hairs that grow in all directions). When you see that this small area is shaved clean, gradually move into a new area while still using the circular motion. Continue this motion, one small section at a time, until entire face is shaved.

If your beard has more than 24-36 hours of growth, use the pop-up Long-Hair Trimmer to cut the beard down to about a one-day growth before using the shaver foil.

LONG-HAIR TRIMMER OPERATION

Your shaver features a special Long-Hair Trimmer located on the back of the shaver which telescopes up and away from the Flex Foil Head for precise and easy trimming of sideburns, beards or mustaches, and for removing long hairs from the neck. And, as mentioned earlier, it can be used to "knock down" heavy beard growth prior to shaving with the foil.

To use, remove Foil Guard and simply push the Long-Hair Trimmer Switch in an upward motion until trimmer slides (clicks) into position. Push On/Off Switch to "ON" position (marked "I" on shaver). Then begin trimming/styling.

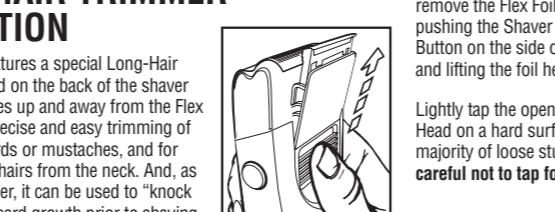

For best performance, charge for 18 hours before the first shave. This product has been designed with the charger in the plug. This construction allows the shaver to be very powerful, yet much lighter for easier maneuverability, and it also keeps the line voltage safely at the plug and not in the shaver.

After cleaning, replace the Cutter Bar Assembly by pressing it down gently and rotating 90° (1/4 turn) to lock into place.

Lightly tap the open side of the Flex Foil Head on a hard surface to remove the majority of loose stubble particles. **Be careful not to tap foil.**

CLEANING AND MAINTENANCE


of Patented DynaFlex Cutters (EPO. Pat. No. 486,903) and Flex Foil Heads

For maximum performance, we recommend you clean your shaver after every few shaves. Any servicing, other than replacement of Flex Foil Head and Cutter Bar Assembly, should be performed by an authorized Wahl Shaver Service Center or Wahl Clipper Corporation (see Warranty for mailing address information).

To clean, turn shaver "OFF" and remove the Flex Foil Head by pushing the Shaver Head Release Button on the side of the shaver and lifting the foil head upward.

Lightly tap the open side of the Flex Foil Head on a hard surface to remove the majority of loose stubble particles. **Be careful not to tap foil.**

From time to time, depending on the density of your beard, you will need to replace the cutters and foils. If you notice that it is taking you longer to shave, or if your face starts to feel some irritation, or if the foil seems to become warm to the touch, it is probably time to replace the cutters and foils. Replace the cutters and foils only with WAHL parts.

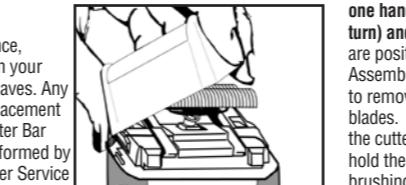


TO REMOVE CUTTER BAR

Turn shaver off. Remove the foil head and, holding the shaver in one hand, gently press down on the cutter bar to rotate it 90° (1/4 turn) and gently lift it upward. Be sure your thumb and first finger are positioned at each end of the Cutter Bar Assembly. Use the cleaning brush provided to remove whiskers between the cutting blades. Brush carefully, so as not to break the cutter bars apart. NOTE: If you do not hold the Cutter Bar Assembly as shown, brushing the blades could result in damage to the assembly.

When the Flex Foil Head and Cutter Bar Assembly are removed from the shaver, an alternate cleaning method is to rinse them under running water. Simply let them air dry.

After cleaning, replace the Cutter Bar Assembly by pressing it down gently and rotating 90° (1/4 turn) to lock into place. Carefully replace the Flex Foil Head, snapping it into place.

8

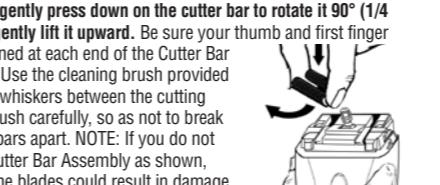

NOTES:

If you have problems with your trimmer, send it prepaid with a note explaining the problem to:

Wahl Clipper Corporation
Attn: Repair Department
3001 Locust Street
Sterling, IL 61081
Telephone (800) 767-9245

For products purchased outside the United States, contact your distributor.

9

10

11

12

13

14

PRECAUCIONES IMPORTANTES

Al usar un aparato eléctrico, se deben tomar siempre precauciones básicas, incluidas las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USAR LA RASURADORA.

PELIGRO

Para reducir el riesgo de un choque eléctrico:

1. No trate de coger la rasuradora que se ha caído en agua. Desconéctela de inmediato.
2. No la use cuando se esté bañando o duchando.
3. No la coloque o almacene donde pueda caerse o pueda ser jalada y caer dentro de la tina o lavabo. No la coloque sobre o la deje caer en el agua u otros líquidos.
4. Excepto al cargar, siempre desconecte este electrodoméstico del tomacorriente.
5. Desconecte la rasuradora antes de limpiarla.

PRECAUCIÓN

Para reducir el riesgo de quemaduras,

1

MÉTODO PARA LOGRAR UN RASURADO RÁPIDO Y AL RAS

Sugerimos que llimpie y seque por completo su piel antes de rasurarse. Para lograr máxima velocidad y eficiencia, sujeté la rasuradora de modo que ambas rejillas estén en contacto con la piel. Cuando se rasura por encima del labio superior o en el cuello, sujeté la rasuradora de modo que la rejilla superior esté en contacto con la piel.

Rasúrese la barba tanto en el sentido de su crecimiento como en sentido contrario, y estire la piel antes de pasar la máquina. Mueva suavemente los cabezales dobles a uno y otro lado, principalmente en contra del sentido de crecimiento de la barba. **No presione las rejillas contra su cara.** Presionar demasiado la afeitadora puede dañar la hoja, lo cual afectaría la afeitada.

Por regla general, recomendamos que reemplace el cabezal Flex Foil de cada seis meses para obtener los mejores resultados. La hoja es microdoblada y dispone de cuchillas interiores protuberantes de gran precisión alrededor de los agujeros para los pelos.

Esta cuchilla se desgasta con el uso, y en tal caso la rasuradora funcionará más despacio y las hojas se calentarán. Coloque siempre el protector de la hoja para evitar daños a los cabezales dobles cuando la rasuradora esté apagada. Para asegurar una afeitada satisfactoria y continua, debe reemplazar las hojas y la barra de la cortadora de manera periódica.

INCENDIOS, CHOQUES ELÉCTRICOS O LESIONES PERSONALES:

1. Esta unidad eléctrica debe de ser usada correctamente en una posición vertical o una posición del montaje del piso.
2. Debe haber una estricta supervisión cuando la rasuradora está siendo usada por o cerca de niños o inválidos.
3. Utilice la rasuradora solamente para el fin para el cual se diseñó, tal como se describe en este manual. No utilice accesorios que no sean recomendados por el fabricante.
4. Nunca opere la rasuradora si el cable o el enchufe se han dañado, si no funciona bien, si se ha caído o se ha dañado, o si se ha caído en agua. Regresela a Wahl Clipper Corporation para que la examinen y la reparen.
5. Mantenga el cable lejos de cualquier superficie caliente.
6. Nunca introduzca o inserte objetos por las aberturas de la rasuradora.
7. No la use al aire libre o la opere donde productos aerosoles (pulverizantes) estén siendo usados, o donde se administra oxígeno.

2

RASURADO DE BARBAS POBLADAS

Empiece rasurándose la zona de la barba que esté menos poblada. Mueva la rasuradora en forma circular en una pequeña zona de la cara (esto para cortar los pelos que crecen en diferentes direcciones). Cuando se haya rasurado completamente esta zona pequeña, muela la rasuradora gradualmente a una zona nueva sin abandonar el movimiento circular. Siga avanzando en pequeñas áreas hasta terminar de rasurar toda su cara.

Si ha dejado crecer la barba por más de 24 a 36 horas, use primero la recortadora de pelo largo para reducir el tamaño de la barba hasta que parezca como si fuera de un solo día de crecimiento, antes de pasar las hojas.

OPERACIÓN DE LA RECORTADORA DE-PELOS LARGOS

Esta rasuradora dispone de una recortadora especial de pelo largo que se proyecta hacia afuera y opera por encima del cabezal Flex Foil para recortar las patillas, barbas o bigotes en forma precisa y fácil, y para cortar los pelos largos del cuello. Además, según se mencionó anteriormente, se puede usar para rebajar la barba espesa antes de rasurarse con el cabezal.

Para usarla, quite el protector de la hoja y simplemente empuje hacia arriba el interruptor de la recortadora de pelo largo hasta que la misma quede en posición (se escuchará un "clic"). Ponga el interruptor en la posición de Encendido (marcada con una "I" en la rasuradora). Después empiece a recortar y dar forma.



 
8. NO UTILICELA RASURADORA SI LOS CABEZALES ESTÁN DAÑADOS O SE HAN QUEBRADO, YA QUE PODRÍAN CAUSARLE LESIONES FACIALES.

9. Siempre conecte primero el cable a la rasuradora, y luego al enchufe de la pared. Para desconectar, siempre ponga los controles en "OFF" (apagado) y luego retire el enchufe de la pared.
10. Utilice solamente el cargador suministrado por el fabricante para recargar esta afeitadora.

GUARDE ESTAS INSTRUCCIONES Solamente Para Uso Residencial DESECHO/REEMPLAZO DE LA BATERÍA DE NÍQUEL-CADMIO

CONTIENE UNA BATERÍA SELLADA, RECARGABLE, DE NÍQUEL-CADMIO. ESTA DEBE SER RECICLADA O DESECHADA APROPIADAMENTE.

Dependiendo del uso, la batería debe durar de cuatro a seis años antes de que sea necesario reemplazarla. Sin embargo, si es necesario un repuesto, debe seguir estos pasos:



1. Primero quite el cabezal Flex Foil mientras la rasuradora está en la posición de apagado. Empuje el botón de desenganche del cabezal de la rasuradora en el lado de la rasuradora y levante el cabezal hacia arriba. Quite la barra cortadora de sostener la rasuradora en una mano, presione suavemente abajo en la barra cortadora para rotarla el 90° y levantela suavemente hacia arriba. Sea seguro que su pulgar y primer dedo están colocados en cada extremo del montaje de la recortadora de pelos largos.

3

1

2

9

8

10

7

6

5

4

3

2

1

9

8

7

6

5

4

3

2

1

9

8

7

6

5

4

3

2

1

9

8

7

6

5

4

3

2

1

9

8

7

6

5

4

3

2

1

9

8

7

6

5

4

3

2

1

9

8

7

6

5

4

3

2

1

9

8

7

6

5

4

3

2

1

9

8

7

6

5

4

3

2

1

9

8

7

6

5

4

3

2

1

9

8

7

6

5

4

3

2

1

9

8

7

6

5

4

3

2

1

9

8

7

6

5

4

3

2

1

9

8

7

6

5

4

3

2

1

9

8

7

6

5

4

3

2

1

9

8

7

6

5